


SnapFast Clamp Instructions

for Quick Release Tool


General Information

Installing the SnapFast clamp is easy. You will need the Quick Release Tool and an insulated hot stick, as shown below. The SnapFast clamp is suitable for wire diameters from 0.3" to 2.75". It can be used for all voltages up to 115kV. For voltages over 115kV, we advise installing on the top static/ground wire. Recommended spacing is every 30 feet.

Products mounted with SnapFast clamps

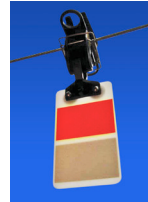

FireFly

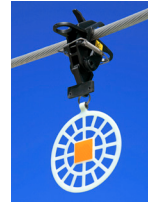

BirdMark



QuikMark



SpanMark

Mounting Instructions



1. Open the SnapFast clamp with your hands, using the large finger holes to avoid getting hurt.

Warning! Handle the opened clamp very carefully, as it snaps closed with significant force and could cause injury.



2. Place the SnapFast clamp onto the Quick Release Tool by: **1** hooking one of the clamp's finger holes over the peg in the cup at the end of the pole and **2** positioning the other finger hole in the opposite cup.

3. Push the opened clamp against the line with the hot stick, until it snaps on and locks itself.



Unmounting Instructions

To unmount the SnapFast clamp, use the separate orange hook on a hot stick. Insert the hook into a large finger hole and pull down. The clamp will open and either slide onto the hook or fall to the ground.

