


## SnapFast Clamp Instructions


### General Information

Installing the SnapFast clamp is easy. You will need the installation tool and an insulated hot stick, as shown below. The SnapFast clamp is suitable for wire diameters from 0.3" to 2.75". It can be used for all voltages up to 115kV. For voltages over 115kV, we advise installing on the top static/ground wire. Recommended spacing is every 30 feet.

### Products mounted with SnapFast clamps

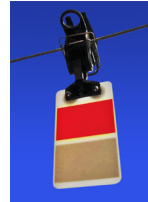

FireFly

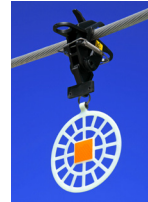

BirdMark



Shown with optional center reflector  
QuikMark



SpanMark

### Mounting Instructions



1. Fasten the installation tool on a hot stick.




2. Open the SnapFast clamp with your hands, using the large finger holes to avoid getting hurt.

**Warning!** Handle the opened clamp very carefully, as it snaps closed with significant force and could cause injury.



3. Place the black tips of the installation tool in the elbows of the open clamp (just below the big finger holes). Push the open clamp against the line until it snaps on and locks itself.

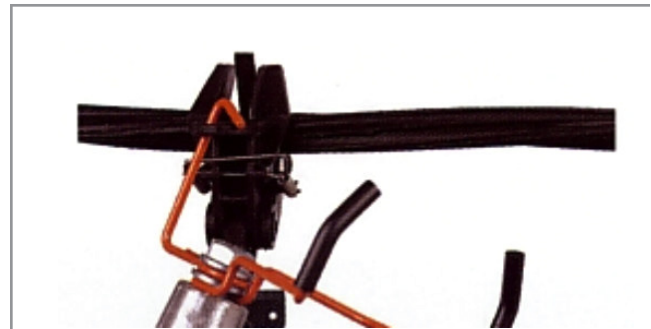

### Unmounting Instructions

To unmount the clamp, use the orange hook on the of the installation tool. Insert the hook into the hole as shown and pull down. The clamp will open and stay on the rod, so it easy to bring it down.